


Basic Equipment Highline


From 2003 m. y.

Main fuse

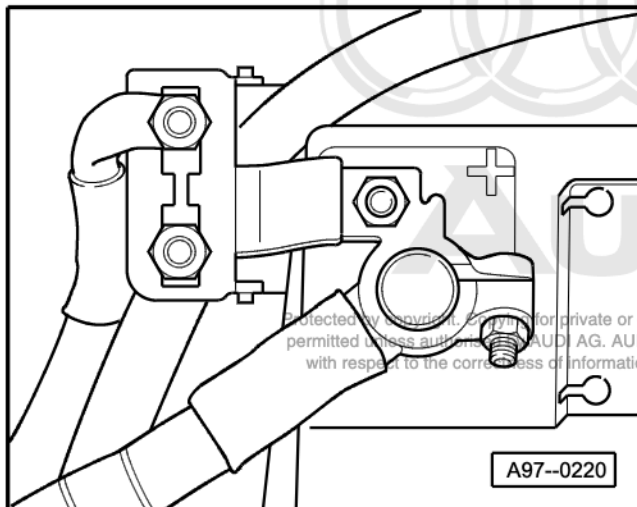

◆ on the Battery

Fuse holder

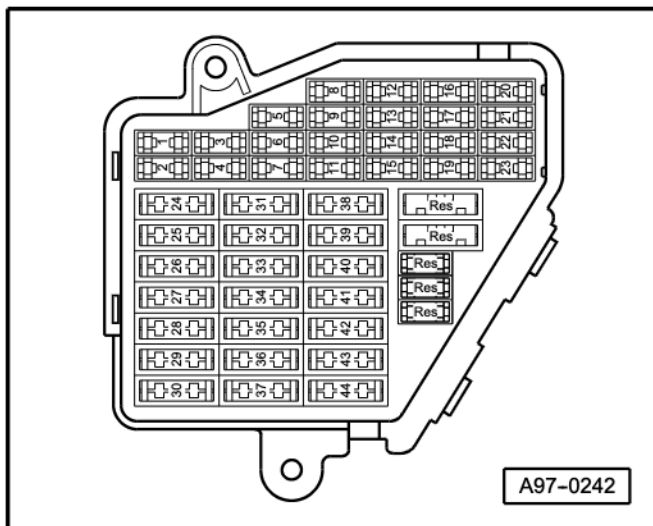

◆ Instrument panel driver side

Fuse Colors

30 A - Green

25 A - Withe

20 A - Yellow

15 A - Blue

10 A - Red

7,5 A - Brown


5 A - Beige



Note:

◆ Fuse in fusebox from 23 onwards are numbered 223 onwards in Current Flow Diagram.

Coupling station with threaded connection

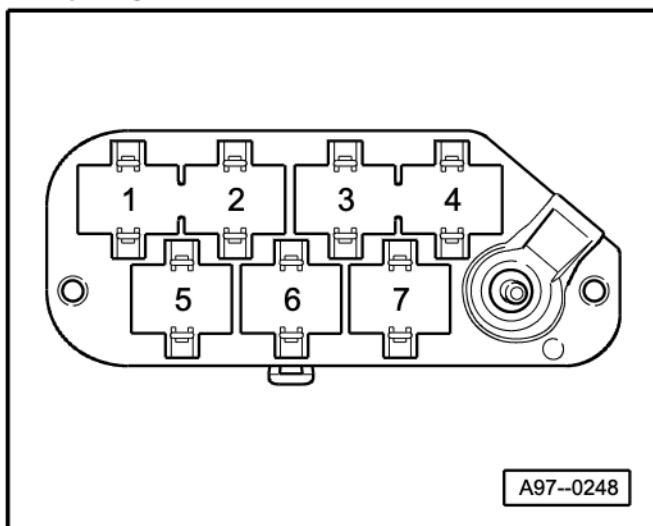

◆ in the electronics box, plenum chamber

1 - 10-Pin Connector, black (T10)

2 - 10-Pin Connector, brown (T10a)


3 - 17-Pin Connector, red (T17d)

6 - 17-Pin Connector, white (T17e)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Connector station A-pillar

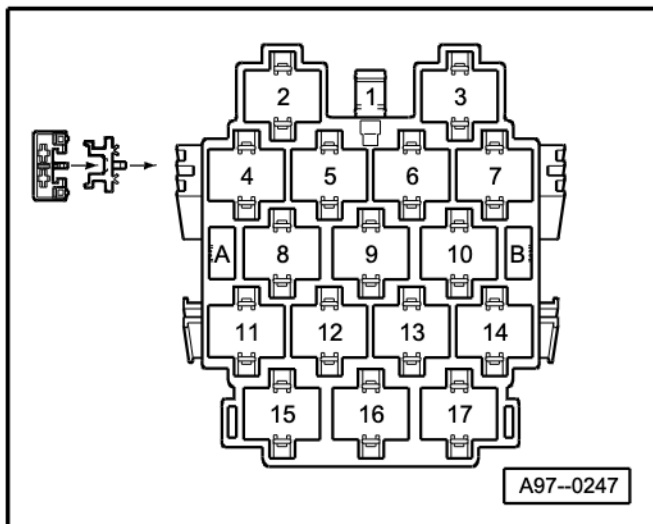


◆ behind side trim, left

- 13 - 10-Pin Connector, violet (T10c)
- 14 - 10-Pin Connector, grey (T10d)
- 15 - 17-Pin Connector, green (T17b)
- 16 - 17-Pin Connector, red (T17a)
- 17 - 17-Pin Connector, black (T17)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Connector station A-pillar

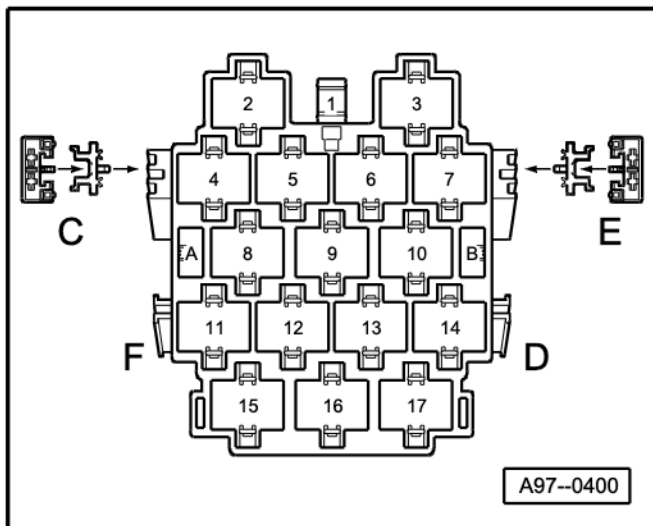

◆ behind side trim, right

15 - 17-Pin Connector, red (T17c)


4-Pin Relay Carrier with threaded connection

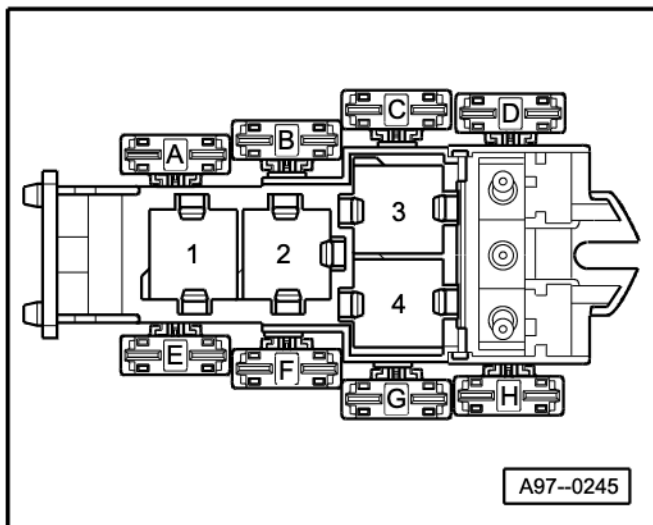

◆ Instrument panel driver side



9-Pin Relay Carrier with Vehicle Electrical System Control Module

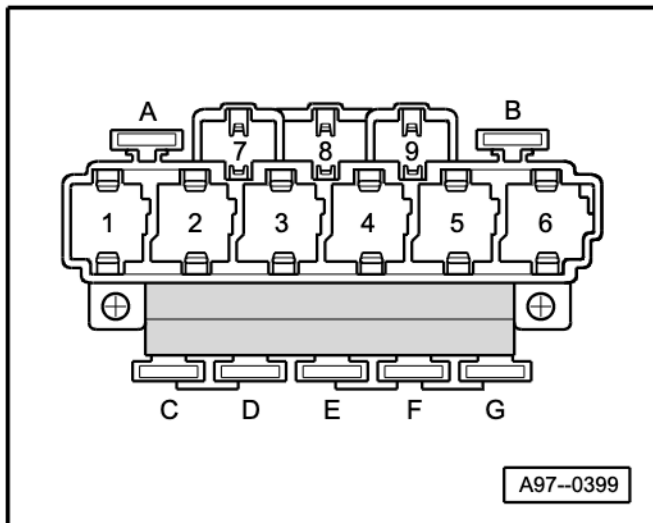

◆ Instrument panel driver side, behind 3-Pin Relay Carrier

3 - Horn Relay (J4)

6 - Load Reduction Relay (J59)




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Ground connections

- T4k 4-Pin Connector, black, near front bumper
- 3 Ground strap, engine to body
- 12 Ground connection, in engine compartment, left
- 26 Ground connection, on front apron
- 50 Ground connection, in luggage compartment, left
- 78 Ground Connection (lower right B-pillar)
- 83 Ground connection -1-, in right front wiring harness
- 86 Ground connection -1-, in rear wiring harness
- 179 Ground connection, in left headlight wiring harness
- 249 Ground connection -2-, in wiring harness interior
- 345 Ground connection (in bumper wiring harness), Fanfare/Fog light

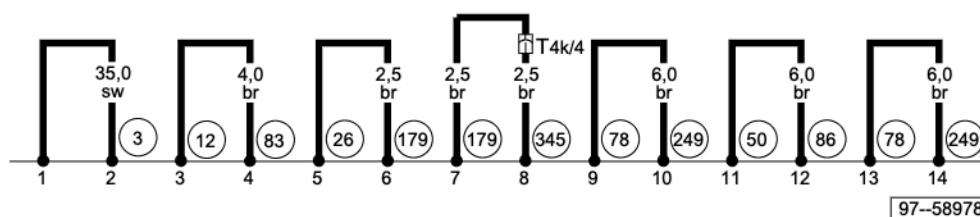

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange
 rs = pink



Ground connections

T10c 10-Pin Connector, violet, connector station A-pillar, left

32 Ground connection, behind instrument panel, left

33 Ground connection, behind instrument panel, right

43 Ground connection (lower right A-pillar)

44 Ground connection (lower left A-pillar)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

49 Ground connection, near Central control module for comfort system

77 Ground Connection (lower left B-pillar)

81 Ground connection -1-, in instrument panel wiring harness


135 Ground connection -2-, in instrument panel wiring harness

176 Ground connection, in right headlight wiring harness

238 Ground connection -1-, in wiring harness interior

261 Ground connection, in wiring harness heated spray jet

277 Ground connector -3-, in wiring harness interior

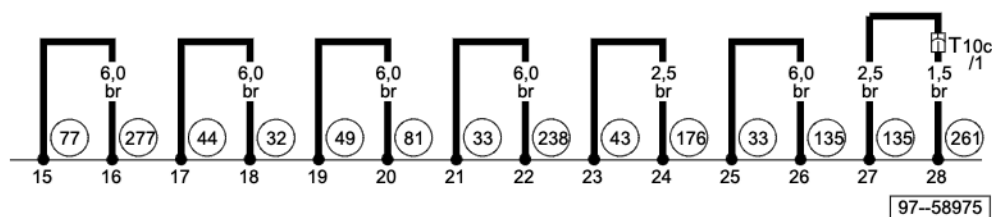

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow
or = orange
rs = pink


Ignition/Starter Switch, main fuse


- A Battery
- B Starter
- D Ignition/Starter Switch
- S88 Fuse Strip (main fuse)
- T10a 10-Pin Connector, brown, connector station E-box, plenum chamber

- 11 Ground connection, in battery box
- 500 Threaded connection -1- (30), on the relay plate
- 501 Threaded connection -2- (30), on the relay plate
- A2 Plus connection (15), in instrument panel wiring harness
- A21 Wire connection (86s), in instrument panel wiring harness
- A32 Plus connection (30), in instrument panel wiring harness
- A33 Wire connection (75), in instrument panel wiring harness

- * Heated spray jet only
- ** see applicable engine wiring diagram

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

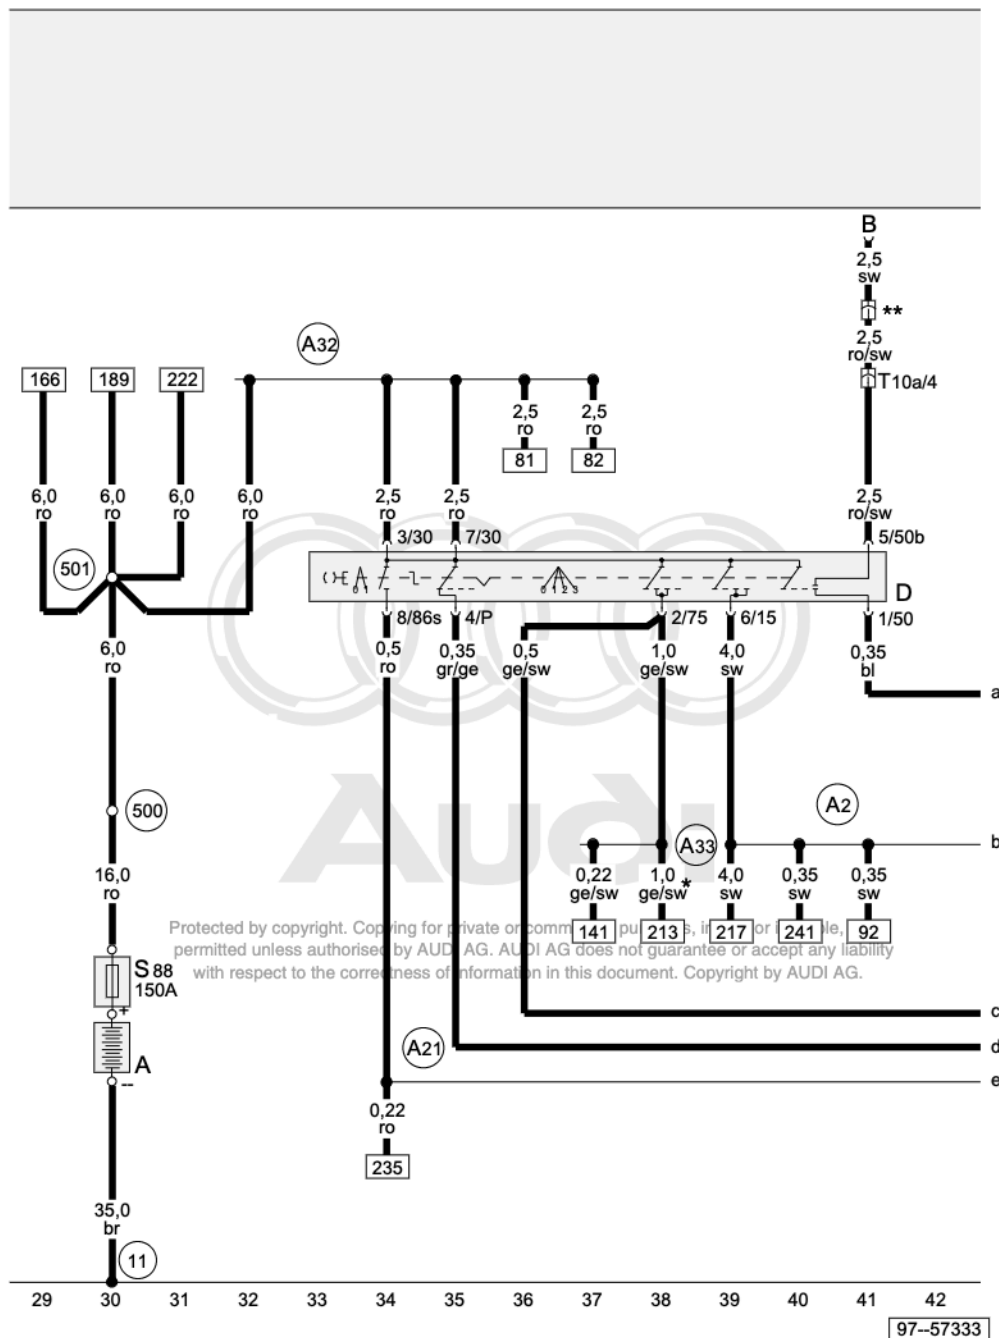

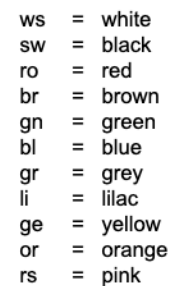


E45	Cruise Control Switch
J...	Engine Control Module (ECM)
J527	Steering Column Electronic Systems Control Module
T16a	16-Pin Connector, black, on steering Column Electronic Systems Control Module
T17e	17-Pin Connector, white, connector station E-box, plenum chamber

- 135 Ground connection -2-, in instrument panel wiring harness
- A2 Plus connection (15), in instrument panel wiring harness
- A21 Wire connection (86s), in instrument panel wiring harness



Turn signal switch, Windshield Wiper/Washer Switch, Steering Angle Sensor, Signal horn activation, Steering Column Electronic Systems Control Module


- E2 Turn signal switch
- E22 Windshield Wiper/Washer Switch
- G85 Steering Angle Sensor
- H Signal horn activation
- J527 Steering Column Electronic Systems Control Module

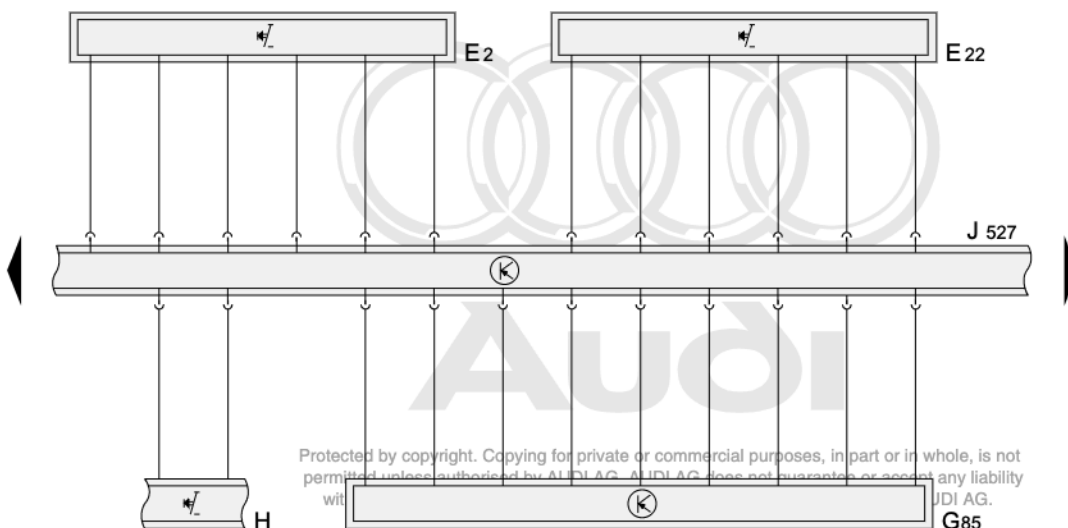

57 58 59 60 61 62 63 64 65 66 67 68 69 70

97-55472

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange
 rs = pink

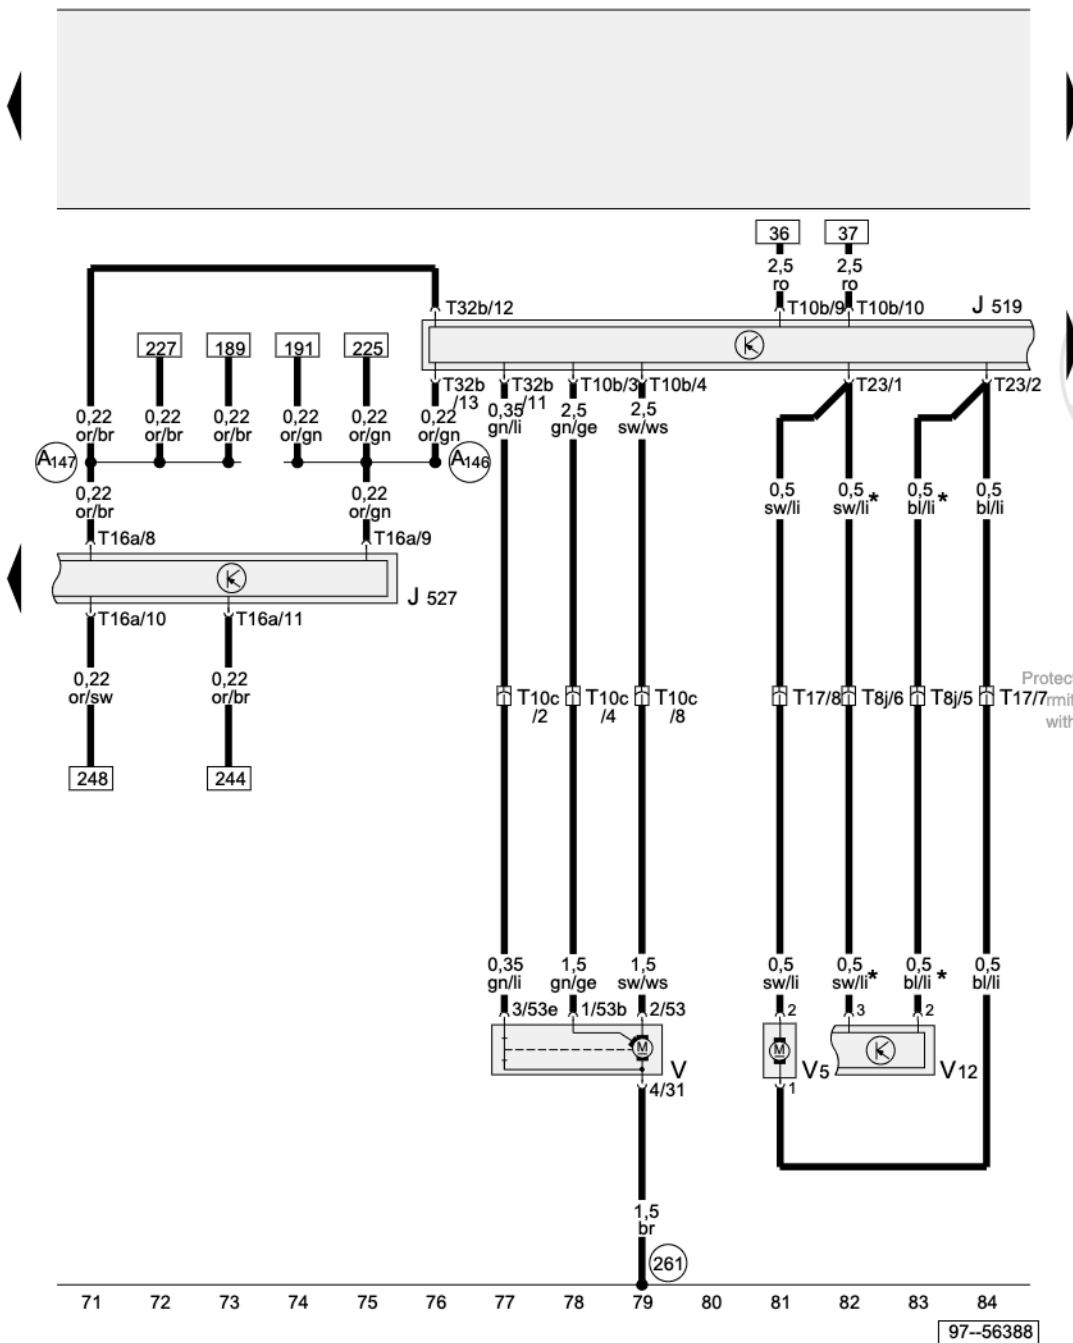

Vehicle Electrical System Control Module, steering Column Electronic Systems Control Module, windshield Wiper Motor, Washer Pump, Motor for rear windshield wiper

- J519 Vehicle Electrical System Control Module
- J527 Steering Column Electronic Systems Control Module
- T8j 8-Pin Connector, black, behind side trim, rear left
- T10b 10-Pin Connector, black, on vehicle Electrical System Control Module
- T10c 10-Pin Connector, violet, connector station A-pillar, left
- T16a 16-Pin Connector, black, on steering Column Electronic Systems Control Module
- T17 17-Pin Connector, black, connector station A-pillar, left
- T23 23-Pin Connector, black, on vehicle Electrical System Control Module
- T32b 32-Pin Connector, grey, on vehicle Electrical System Control Module
- V Windshield Wiper Motor
- V5 Windshield Washer Pump
- V12 Motor for rear windshield wiper


- 261 Ground connection, in wiring harness heated spray jet
- A146 Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 Comfort System Low-bus Connection (in instrument panel wiring harness)
- * for avant, see applicable avant rear wiring diagram

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange
 rs = pink

Light switch, Headlight Adjuster, Vehicle Electrical System Control Module

- E1 Light switch
- E23 Fog Light Switch
- E102 Headlight Adjuster
- J519 Vehicle Electrical System Control Module
- T32b 32-Pin Connector, grey, on vehicle Electrical System Control Module

- 135 Ground connection -2-, in instrument panel wiring harness
- 238 Ground connection -1-, in wiring harness interior
- A3 Plus connection (58), in instrument panel wiring harness
- A51 Wire connection (56), in instrument panel wiring harness
- A114 Wire connection (headlight Adjuster), in instrument panel wiring harness
- * with Automatic headlights assistant / coming-/leavinghome function only, see applicable wiring diagram

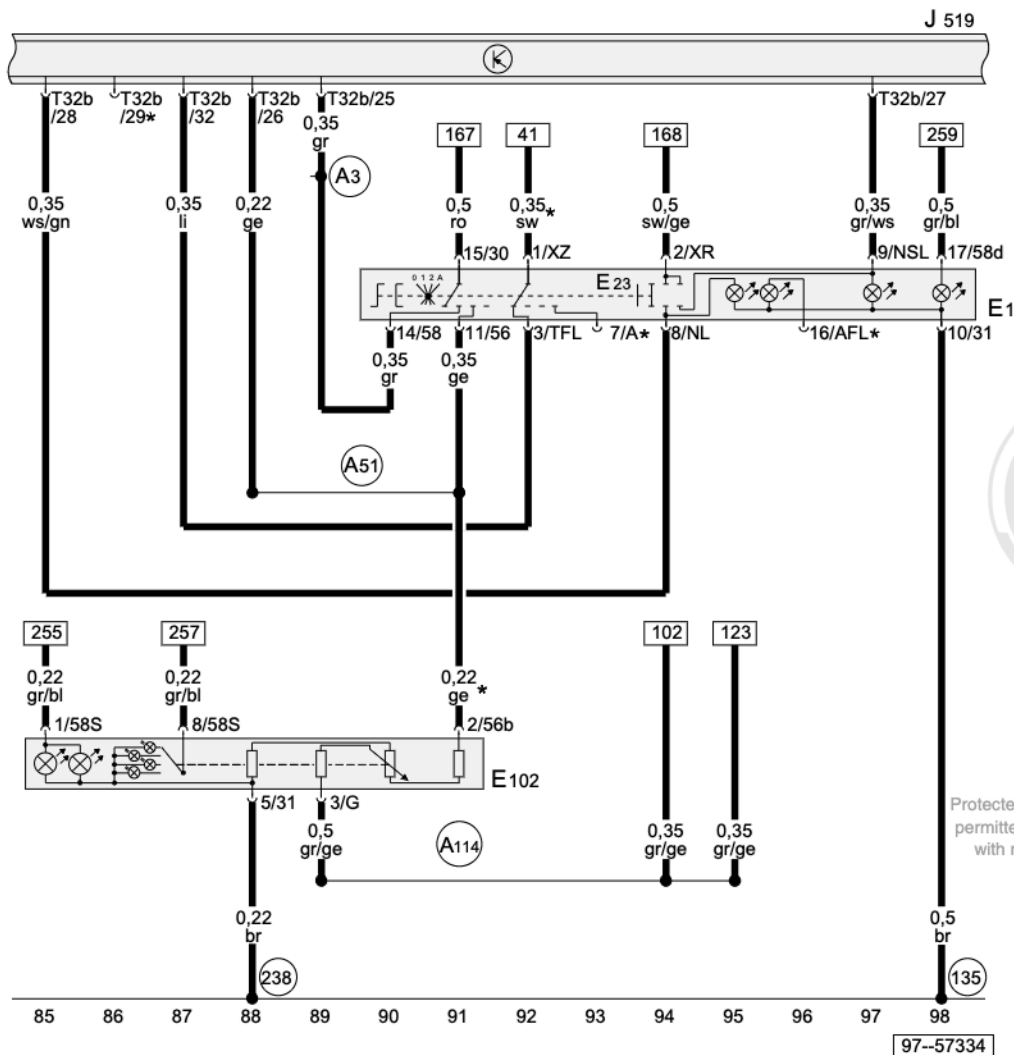

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange
 rs = pink

Left Headlight, left Fog Light


- E102 Headlight Adjuster
- J519 Vehicle Electrical System Control Module
- L22 Left Front Fog Light
- M1 Left Parking Light
- M5 Left Front Turn Signal Light
- M18 Left Side Turn Signal Light
- M29 Left Low Beam Headlight
- M30 Left High Beam Headlight
- T4k 4-Pin Connector, black, near front bumper
- T17 17-Pin Connector, black, connector station A-pillar, left
- T17a 17-Pin Connector, red, connector station A-pillar, left
- T23 23-Pin Connector, black, on vehicle Electrical System Control Module
- T32b 32-Pin Connector, grey, on vehicle Electrical System Control Module
- V48 Left Headlight Beam Adjusting Motor


- 179 Ground connection, in left headlight wiring harness
- 345 Ground connection (in bumper wiring harness), Fanfare/Fog light
- A6 Plus connection (left turn signal), in instrument panel wiring harness
- A181 Left Turn Signal Plus Connection 2 (in instrument panel wiring harness)
- B167 Connector (56b), in wiring harness interior
- E117 Connector (56a, left), in instrument panel wiring harness

* with Automatic headlights assistent / coming-/leavinghome function only
 ** if it exists

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange
 rs = pink

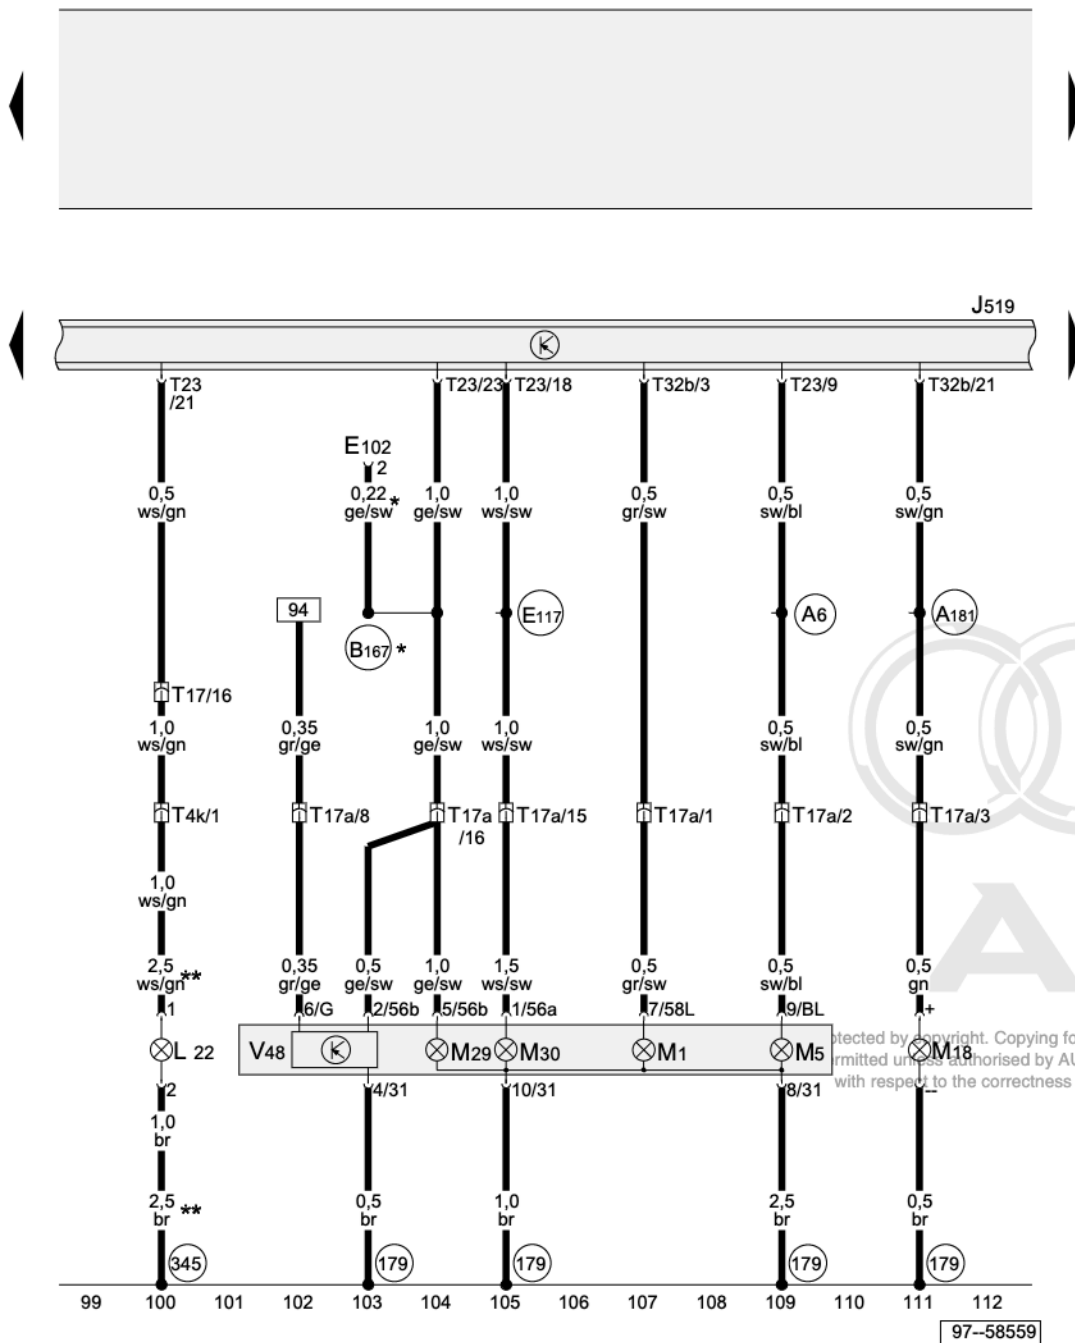

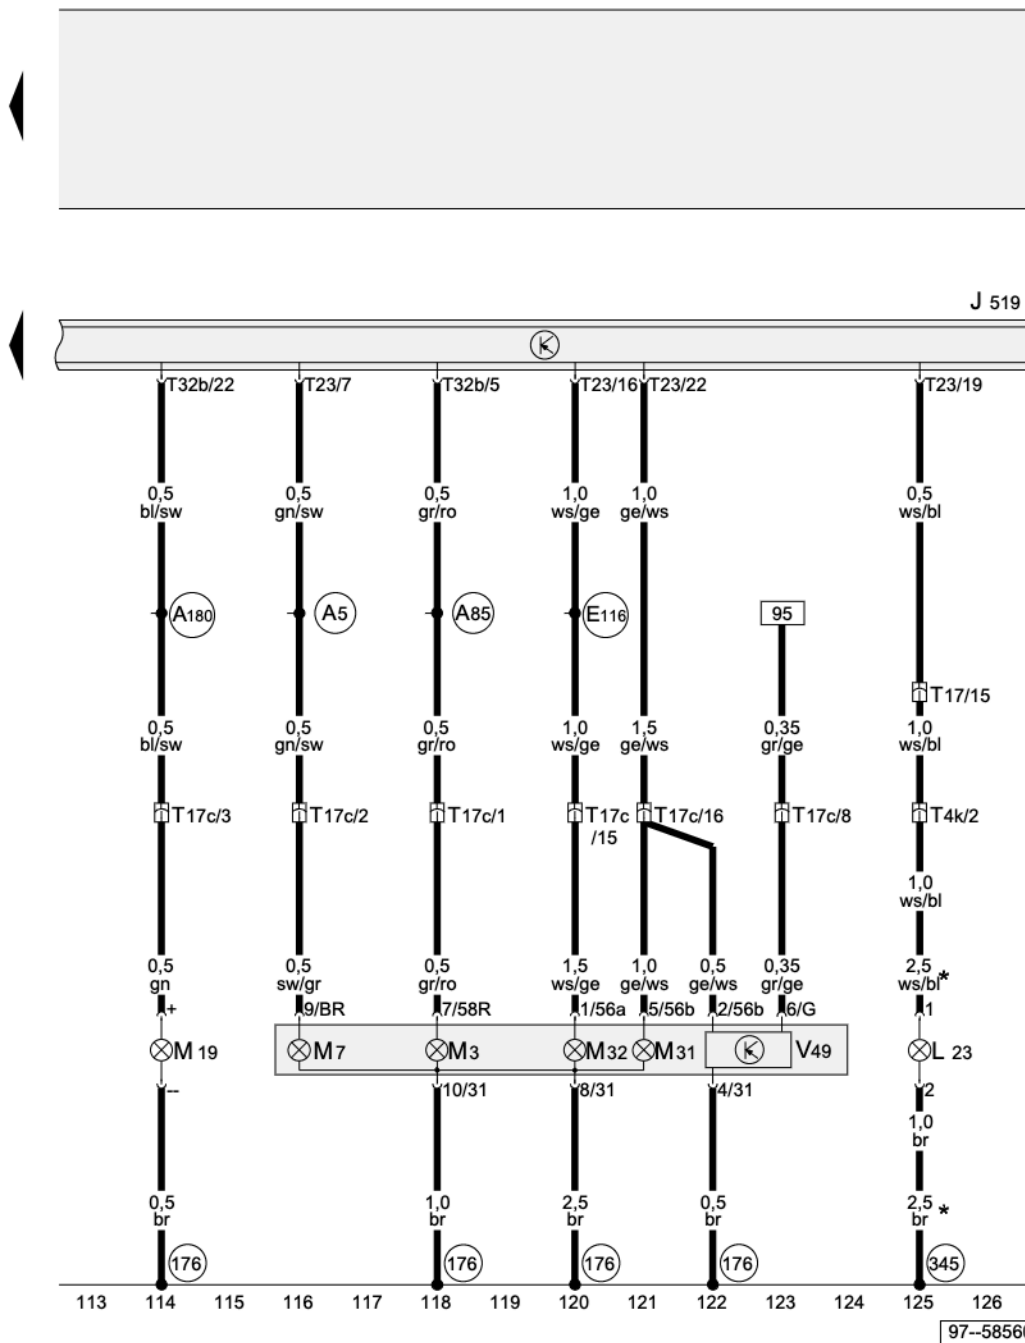

Right headlight, right Fog Light

- J519 Vehicle Electrical System Control Module
- L23 Right Front Fog Light
- M3 Right Parking Light
- M7 Right Front Turn Signal Light
- M19 Right Side Turn Signal Light
- M31 Right Low Beam Headlight
- M32 Right High Beam Headlight
- T4k 4-Pin Connector, black, near front bumper
- T17 17-Pin Connector, black, connector station A-pillar, left
- T17c 17-Pin Connector, red, connector station A-pillar, right
- T23 23-Pin Connector, black, on vehicle Electrical System Control Module
- T32b 32-Pin Connector, grey, on vehicle Electrical System Control Module
- V49 Right Headlight Beam Adjusting Motor

- 176 Ground connection, in right headlight wiring harness
- 345 Ground connection (in bumper wiring harness), Fanfare/Fog light
- A5 Plus connection (right turn signal), in instrument panel wiring harness
- A85 Wire connection (58R), in instrument panel wiring harness
- A180 Right Turn Signal Plus Connection 2 (in instrument panel wiring harness)
- E116 Connector (56a, right), in instrument panel wiring harness
- * if it exists

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange
 rs = pink


Back-up Light

- J519 Vehicle Electrical System Control Module
- L46 Left Rear Fog Light
- M2 Right Tail Light
- M4 Left Tail Light
- M6 Left Rear Turn Signal Light
- M8 Right Rear Turn Signal Light
- M9 Left Brake Light
- M10 Right Brake Light
- M16 Left Back-Up Light
- M17 Right Back-Up Light
- M25 High-mount Brake Light
- T4I 4-Pin Connector, black, in rear lid
- T23 23-Pin Connector, black, on vehicle Electrical System Control Module
- T32b 32-Pin Connector, grey, on vehicle Electrical System Control Module
- X License Plate Light

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by Audi AG. Information in this document. Copyright by AUDI AG.

- 86 Ground connection -1-, in rear wiring harness
- 249 Ground connection -2-, in wiring harness interior
- A88 Connector fog light, in instrument panel wiring harness
- B132 Connector (license plate light), in wiring harness interior
- B186 Connection 2 (BL) in passenger compartment wiring harness
- B187 Connection 2 (BR) in passenger compartment wiring harness
- * for avant, see applicable avant rear wiring diagram


ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow
or = orange
rs = pink

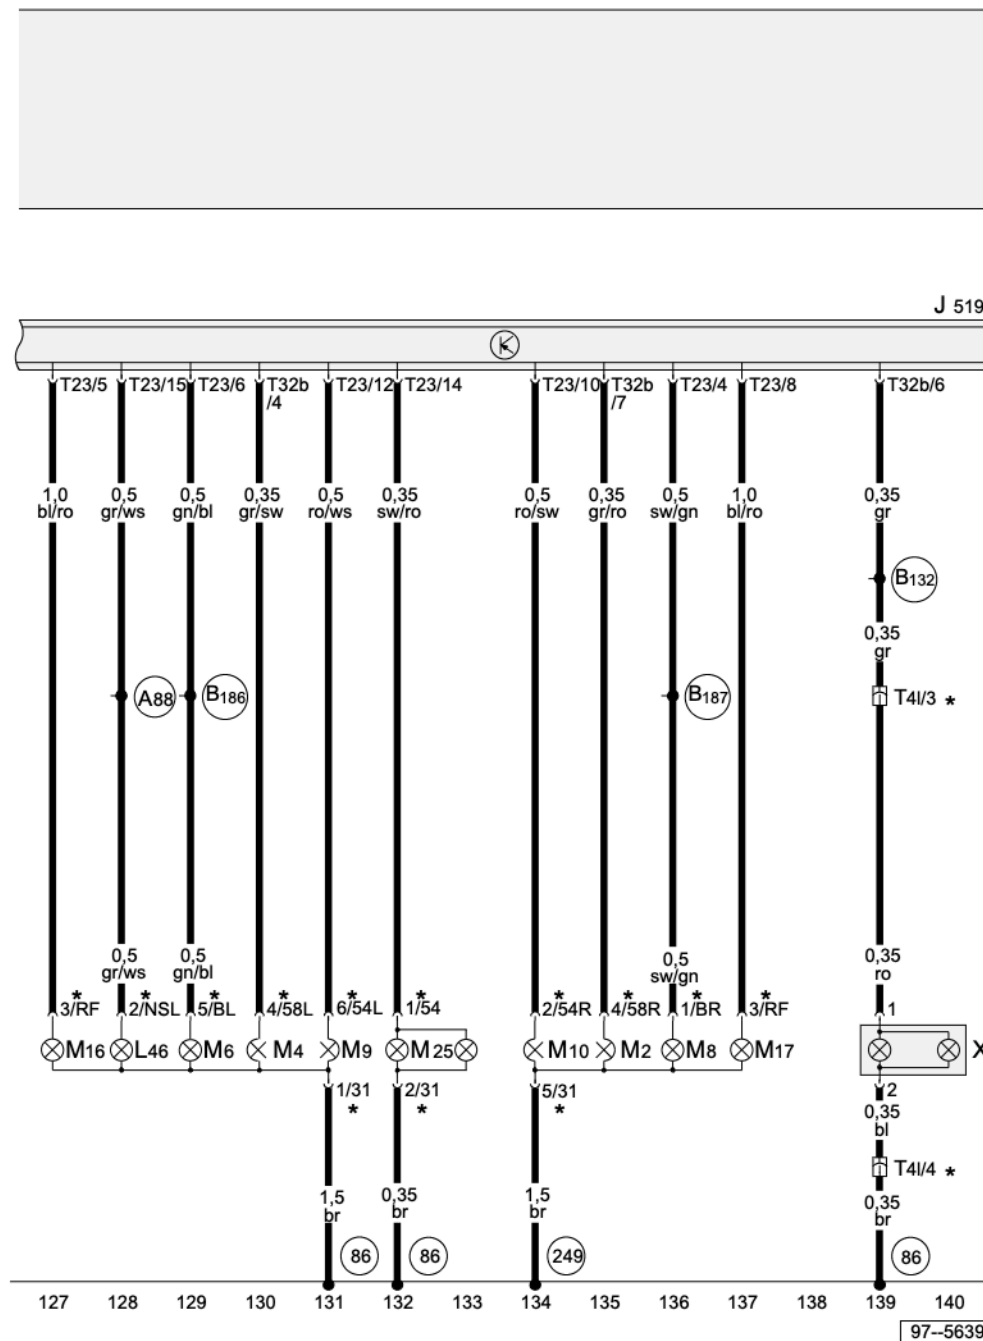

Switch for emergency flasher, horns, vehicle Electrical System Control Module

- E229 Switch for emergency flasher
- H2 High Tone Horn
- H7 Low Tone Horn
- J4 Horn Relay
- J519 Vehicle Electrical System Control Module
- T4k 4-Pin Connector, black, near front bumper
- T17a 17-Pin Connector, red, connector station A-pillar, left
- T17f 17-Pin Connector, orange, connector station A-pillar, left
- T32b 32-Pin Connector, grey, on vehicle Electrical System Control Module
- W Front Interior Light
- Y7 Automatic Day/Night Interior Mirror
- 135 Ground connection -2-, in instrument panel wiring harness
- 345 Ground connection (in bumper wiring harness), Fanfare/Fog light
- A19 Connector (58d), in instrument panel wiring harness
- A90 Connector (two-tone horn), in instrument panel wiring harness
- B260 Connector (emergency flasher), in wiring harness interior
- E112 Connector (Horn -87h) in instrument panel wiring harness
- X66 Horn Connection (in front bumper wiring harness)
- * with Automatic headlights assistant / coming-/leavinghome function only


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

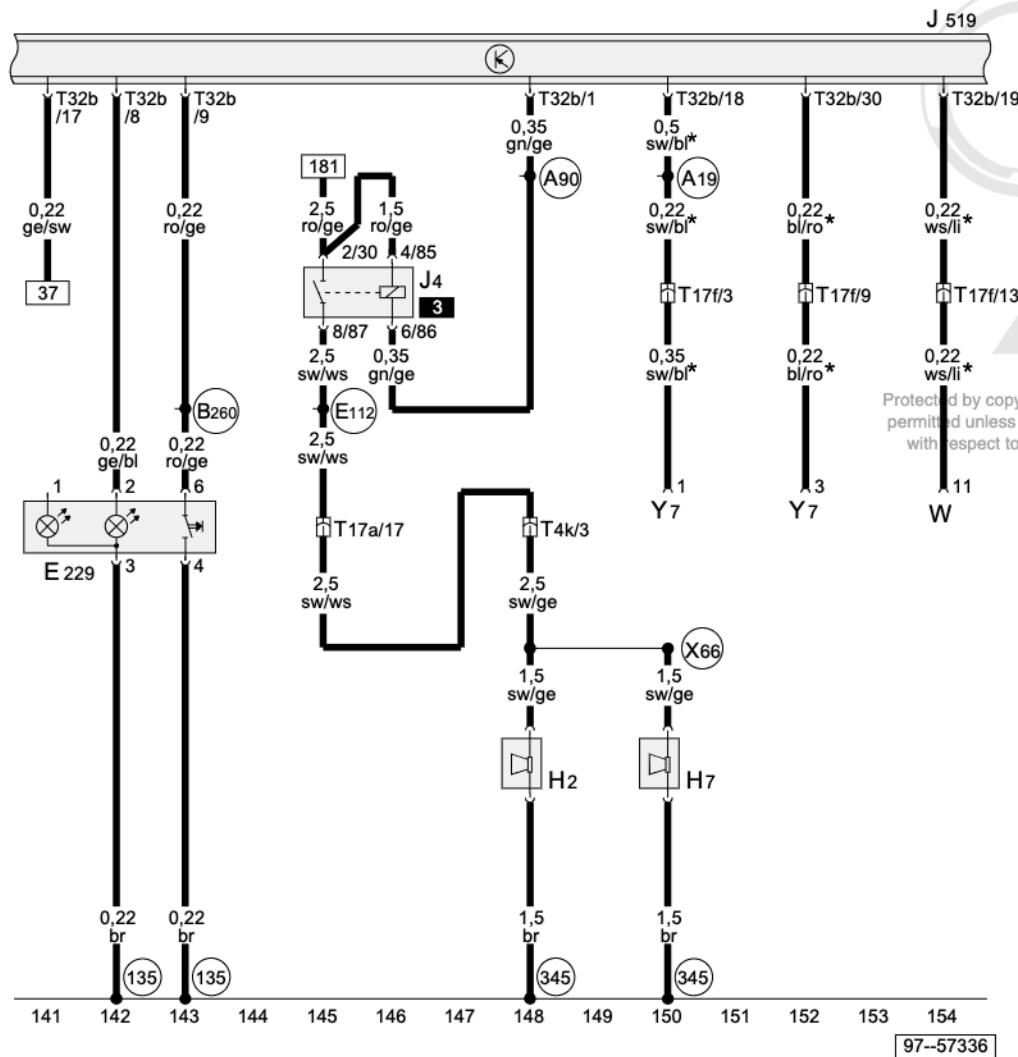

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange
 rs = pink

Load Reduction Relay, vehicle Electrical System Control Module, Headlight Washer Pump


- F Brake Light Switch
- J59 Load Reduction Relay
- J519 Vehicle Electrical System Control Module
- T1a 1-Pin Connector, black, connector station A-pillar, left
- T23 23-Pin Connector, black, on vehicle Electrical System Control Module
- T32b 32-Pin Connector, grey, on vehicle Electrical System Control Module
- V11 Headlight Washer Pump
- 44 Ground connection (lower left A-pillar)
- 135 Ground connection -2-, in instrument panel wiring harness
- A18 wire connection (54), in instrument panel wiring harness
- A34 Wire connection (75x), in instrument panel wiring harness
- A57 Plus connection -2- (30), in instrument panel wiring harness
- A154 Brake Pedal Switch Connection (in instrument panel wiring harness)
- * Washer pump protected by Fuse S237

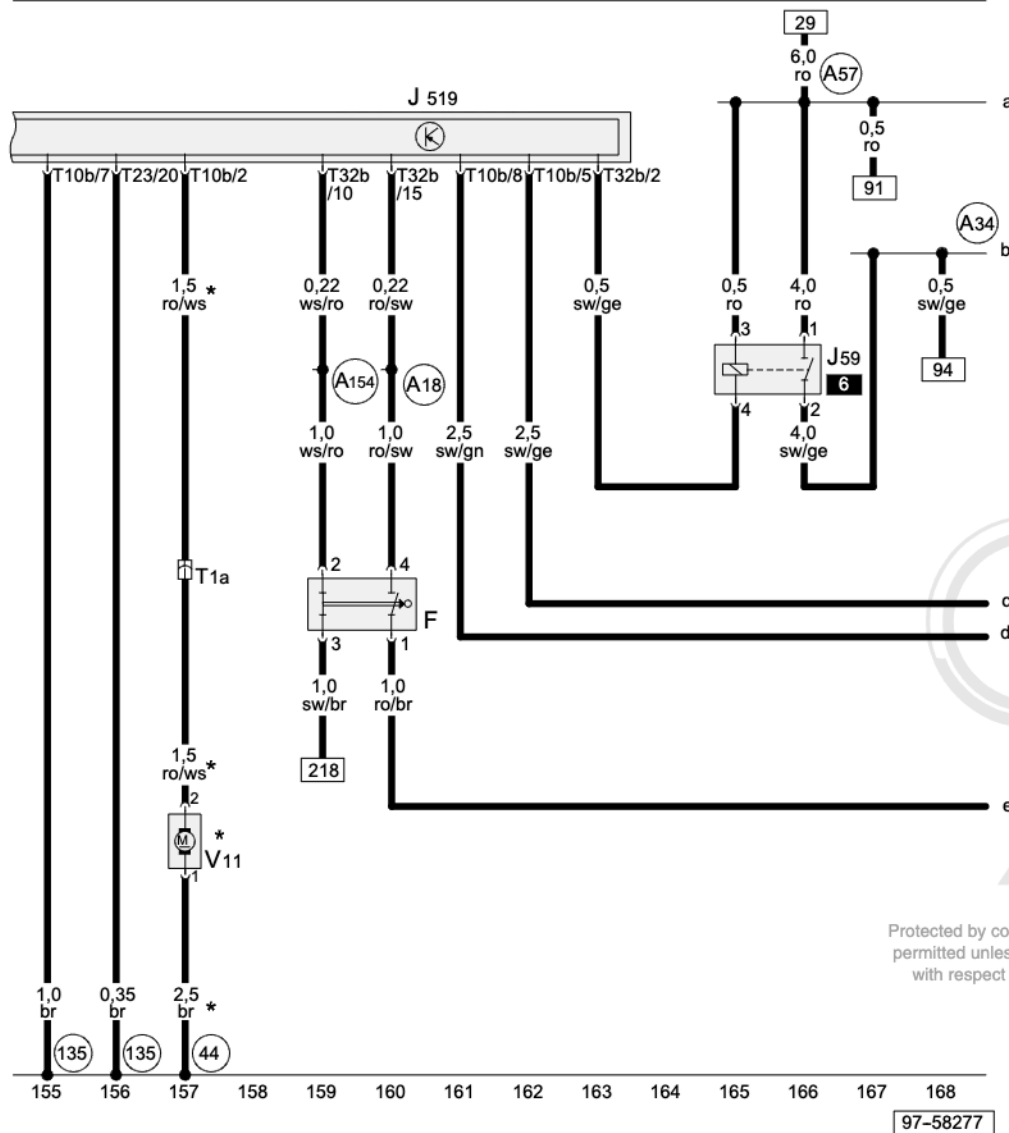

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange
 rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by Audi AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

97-58277

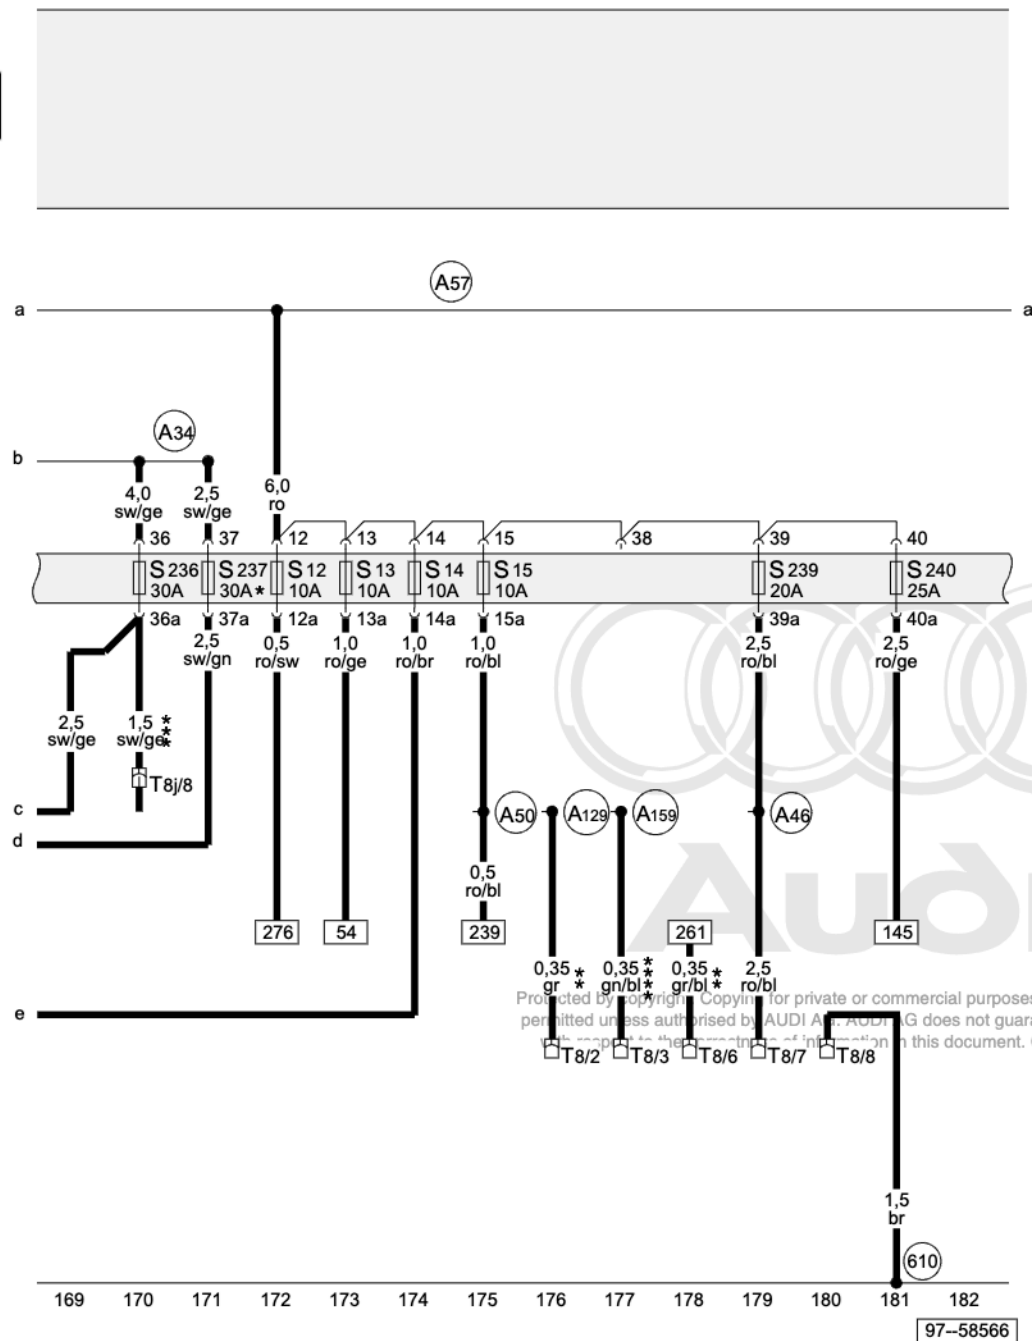

Fuses, radio connector III


- S12 Fuse in fuse holder/relay panel
- S13 Fuse in fuse holder/relay panel
- S14 Fuse in fuse holder/relay panel
- S15 Fuse in fuse holder/relay panel
- S236 Fuse in fuse holder
- S237 Fuse in fuse holder
- S239 Fuse in fuse holder
- S240 Fuse in fuse holder

- T8 8-Pin Connector, black, radio connector III
- T8j 8-Pin Connector, black, behind side trim, rear left

- 610 Ground connection (Audio) (under center console, front)
- A34 Wire connection (75x), in instrument panel wiring harness
- A46 Plus connection (30-from radio), in instrument panel wiring harness
- A50 Plus connection (30as), in instrument panel wiring harness
- A57 Plus connection -2- (30), in instrument panel wiring harness
- A129 Wire connection (quiet switch), in instrument panel wiring harness
- A159 Connection (L) (in instrument panel wiring harness)

- * Fuse increased from 25A to 30A.
- ** if it exists
- *** for avant, see applicable avant rear wiring diagram
- **** with Radio concert or symphony only


- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

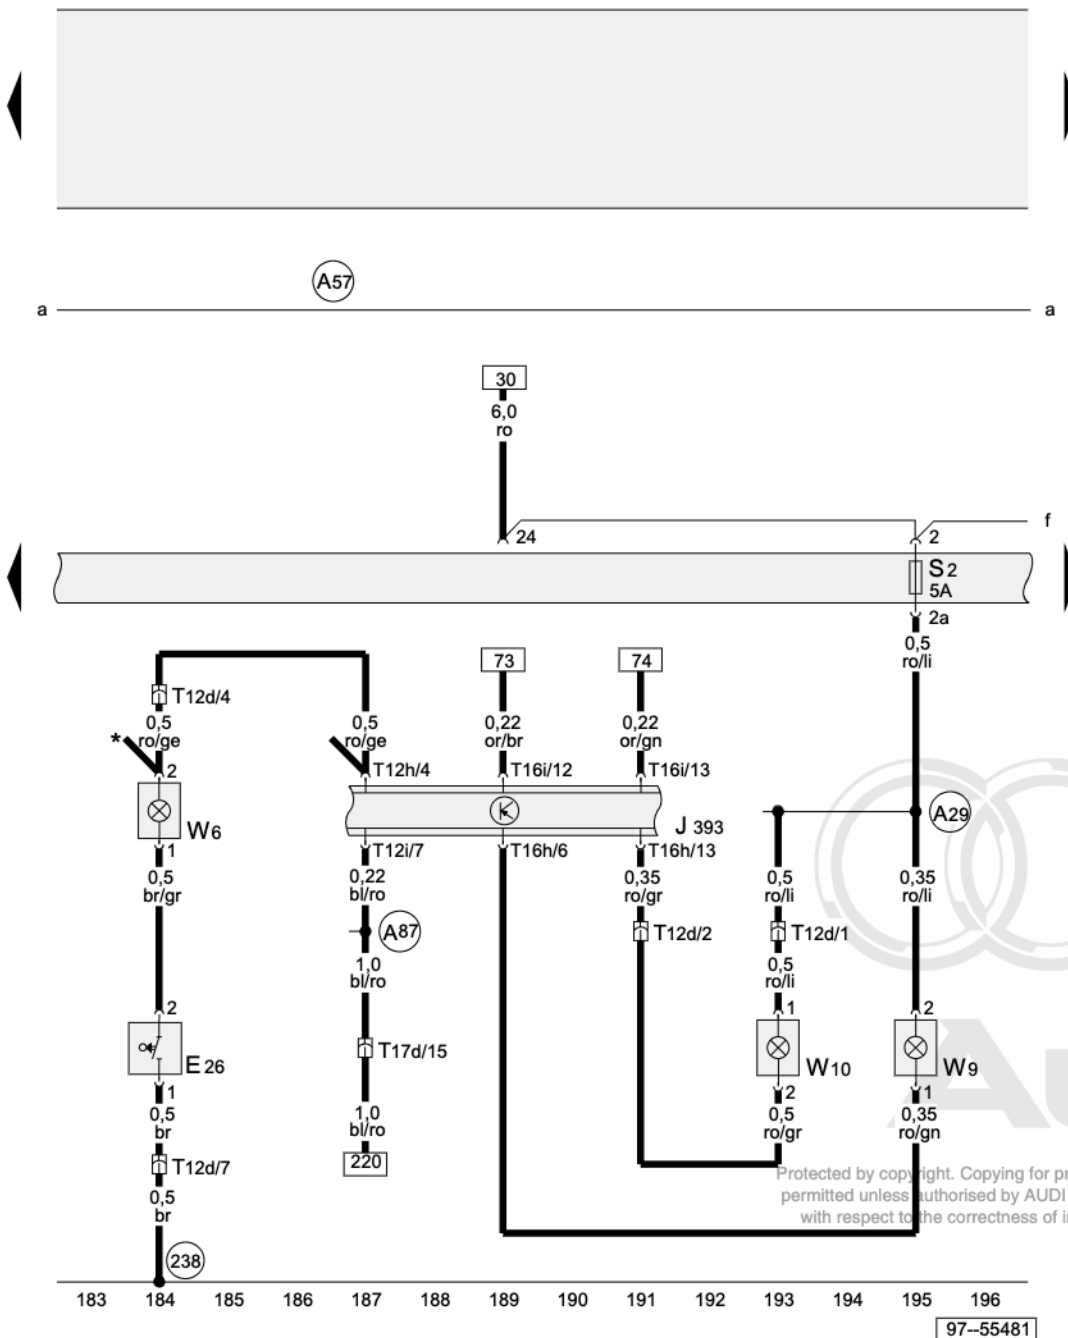

Fuses, Glove Compartment Light, Footwell Light

- E26 Switch for glove compartment light
- J393 Central control module for comfort system
- S2 Fuse in fuse holder/relay panel
- T12d 12-Pin Connector, brown, near glove Compartment
- T12h 12-Pin Connector, black, on central control module for comfort system (used to be Connector 1)
- T12i 12-Pin Connector, black, on central control module for comfort system (used to be Connector 3)
- T16h 16-Pin Connector, black, on central control module for comfort system (used to be Connector 2)
- T16i 16-Pin Connector, brown, on central control module for comfort system (used to be Connector 5)
- T17d 17-Pin Connector, red, connector station E-box, plenum chamber
- W6 Glove Compartment Light
- W9 Left Footwell Light
- W10 Right Footwell Light

- 238 Ground connection -1-, in wiring harness interior
- A29 Wire connection (interior light), in instrument panel wiring harness
- A57 Plus Connection 3 (30) (in instrument panel wiring harness)
- A87 Connector (reverse lamp), in instrument panel wiring harness
- * with key switch for switching off passenger side airbag only

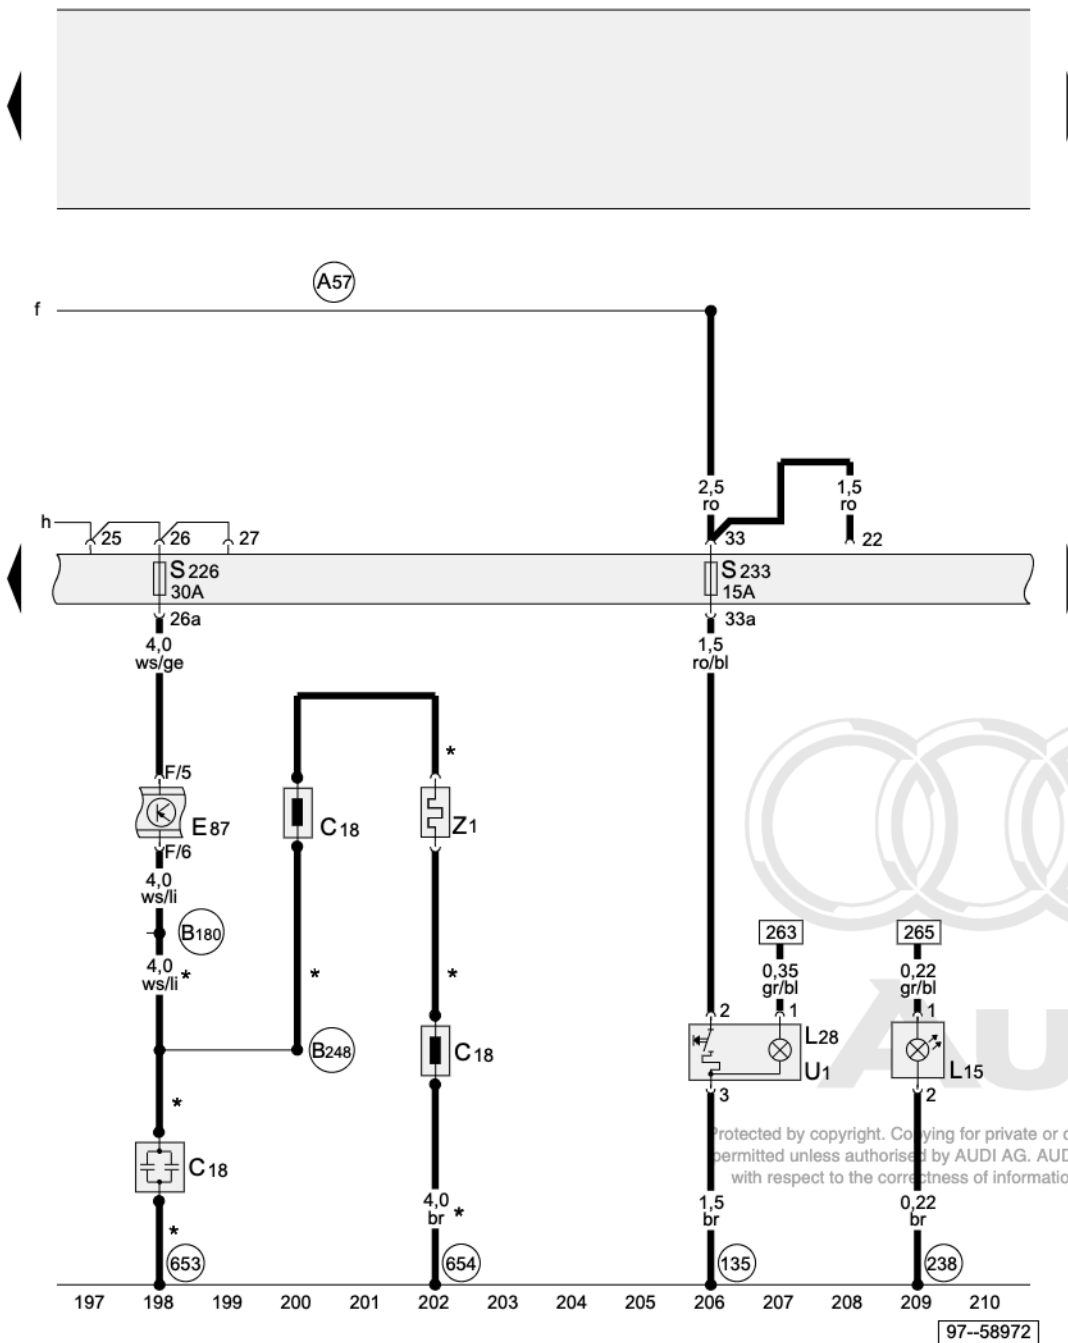


Fuses, Heated rear window, Cigarette Lighter, Ashtray Light

- C18 Windshield Antenna Suppression Filter
- E87 A/C Control Head
- L15 Ashtray Light
- L28 Cigarette Lighter Light
- S226 Fuse in fuse holder
- S233 Fuse in fuse holder
- U1 Cigarette Lighter
- Z1 Heated rear window

- 135 Ground connection -2-, in instrument panel wiring harness
- 238 Ground connection -1-, in wiring harness interior
- 653 Ground Connection (on left D-pillar)
- 654 Ground Connection (on right D-pillar)
- A57 Plus Connection 3 (30) (in instrument panel wiring harness)
- B180 Connection (heated rear window) in passenger compartment wiring harness
- B248 Heated Rear Window Connection 2 (in interior wiring harness)
- * for avant, see applicable avant rear wiring diagram

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange
 rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

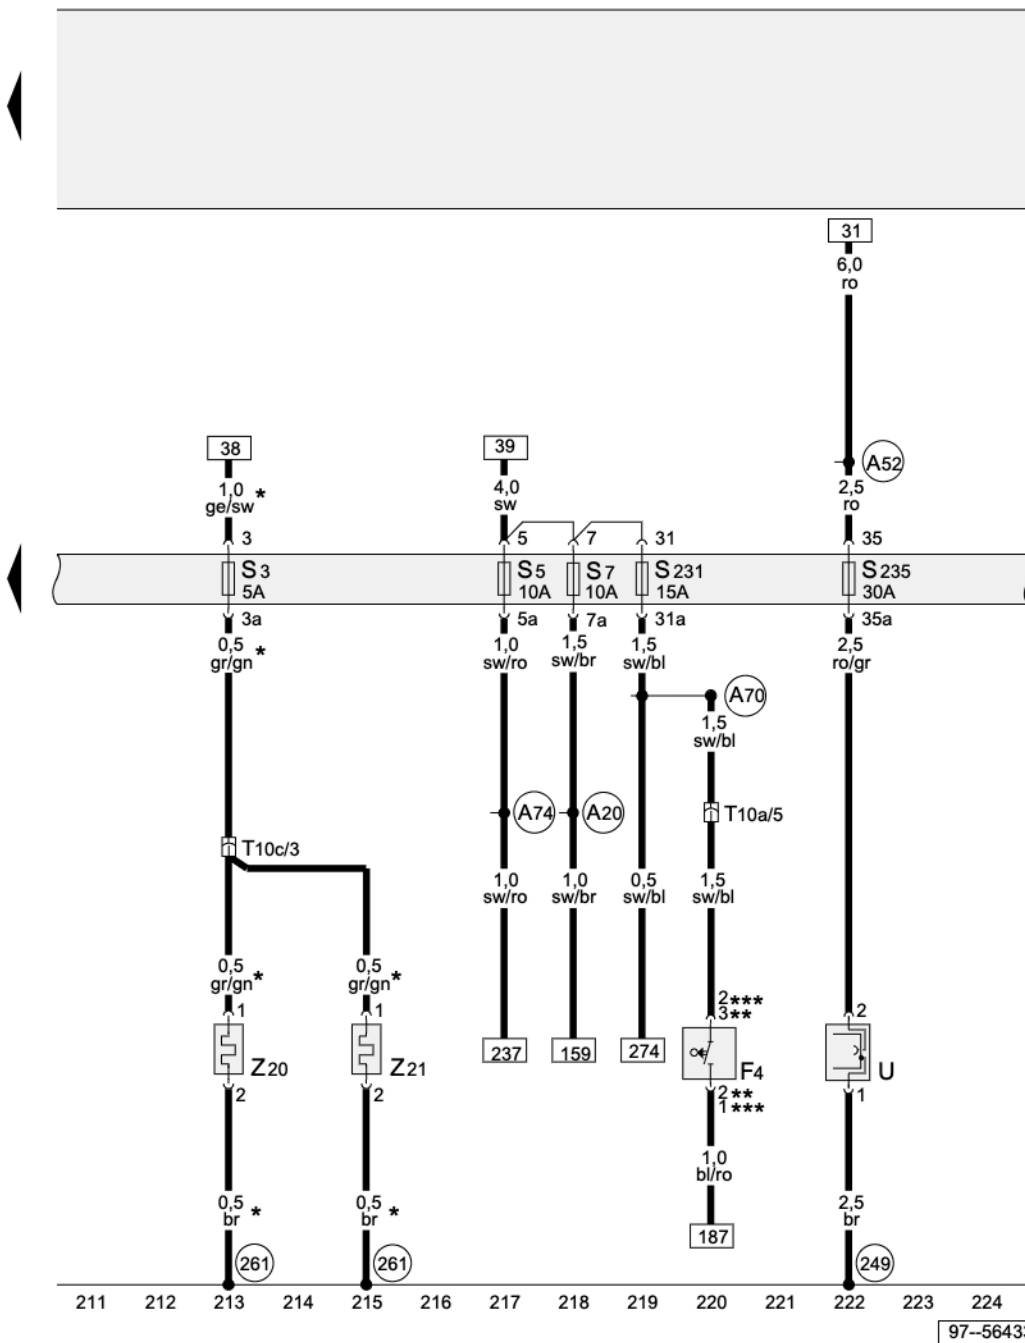

Fuses, Back-Up Light Switch, Washer Nozzle Heaters

- F4 Back-Up Light Switch
- S3 Fuse in fuse holder/relay panel
- S5 Fuse in fuse holder/relay panel
- S7 Fuse in fuse holder/relay panel
- S231 Fuse in fuse holder
- S235 Fuse in fuse holder
- T10a 10-Pin Connector, brown, connector station E-box, plenum chamber
- T10c 10-Pin Connector, violet, connector station A-pillar, left
- U Socket
- Z20 Left Washer Nozzle Heater
- Z21 Right Washer Nozzle Heater
- 249 Ground connection -2-, in wiring harness interior
- 261 Ground connection, in wiring harness heated spray jet
- A20 Plus Connection (15a) (in instrument panel wiring harness)
- A52 Plus connection -2- (30), in instrument panel wiring harness
- A70 Connector (15a, fuse 231), in instrument panel wiring harness
- A74 Connector (15a, fuse 5), in instrument panel wiring harness

* Heated spray jet only
 ** Manual transmission (SG5) only
 *** Manual transmission (SG6) only

Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. AUDI AG assumes no liability with respect to the correctness of information in this document. Copyright by AUDI AG.


- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

Control module with indicator unit in instrument panel insert, Engine Coolant Temperature (ECT) Sensor, Engine Coolant Level (ECL) Warning Switch, Sender for fuel gauge, Oil Level Thermal Sensor, Ambient Temperature Switch, Windshield Washer Fluid Level Warning Switch

- D2 Induction Coil of Anti-theft Immobilizer
- F38 Ambient Temperature Switch
- F66 Engine Coolant Level (ECL) Warning Switch
- F77 Windshield Washer Fluid Level Warning Switch
- G Sender for fuel gauge
- G1 Fuel Gauge
- G2 Engine Coolant Temperature (ECT) Sensor
- G3 Engine Coolant Temperature (ECT) Gauge
- G169 Fuel Level Sensor 2
- G266 Oil Level Thermal Sensor
- J285 Control module with indicator unit in instrument panel insert
- T10 10-Pin Connector, black, connector station E-box, plenum chamber
- T10a 10-Pin Connector, brown, connector station E-box, plenum chamber
- T10d 10-Pin Connector, grey, connector station A-pillar, left
- T14 4-Pin Connector, black, in engine compartment, left
- T17 17-Pin Connector, black, connector station A-pillar, left
- T32 32-Pin Connector, blue, on instrument panel insert

- 83 Ground connection -1-, in right front wiring harness
- 269 Ground connection (sensor Ground) -1-, in instrument panel wiring harness
- 327 Ground connection (sensor Ground), in engine compartment
- * Ground connection (in engine compartment) quattro only

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow
or = orange
rs = pink

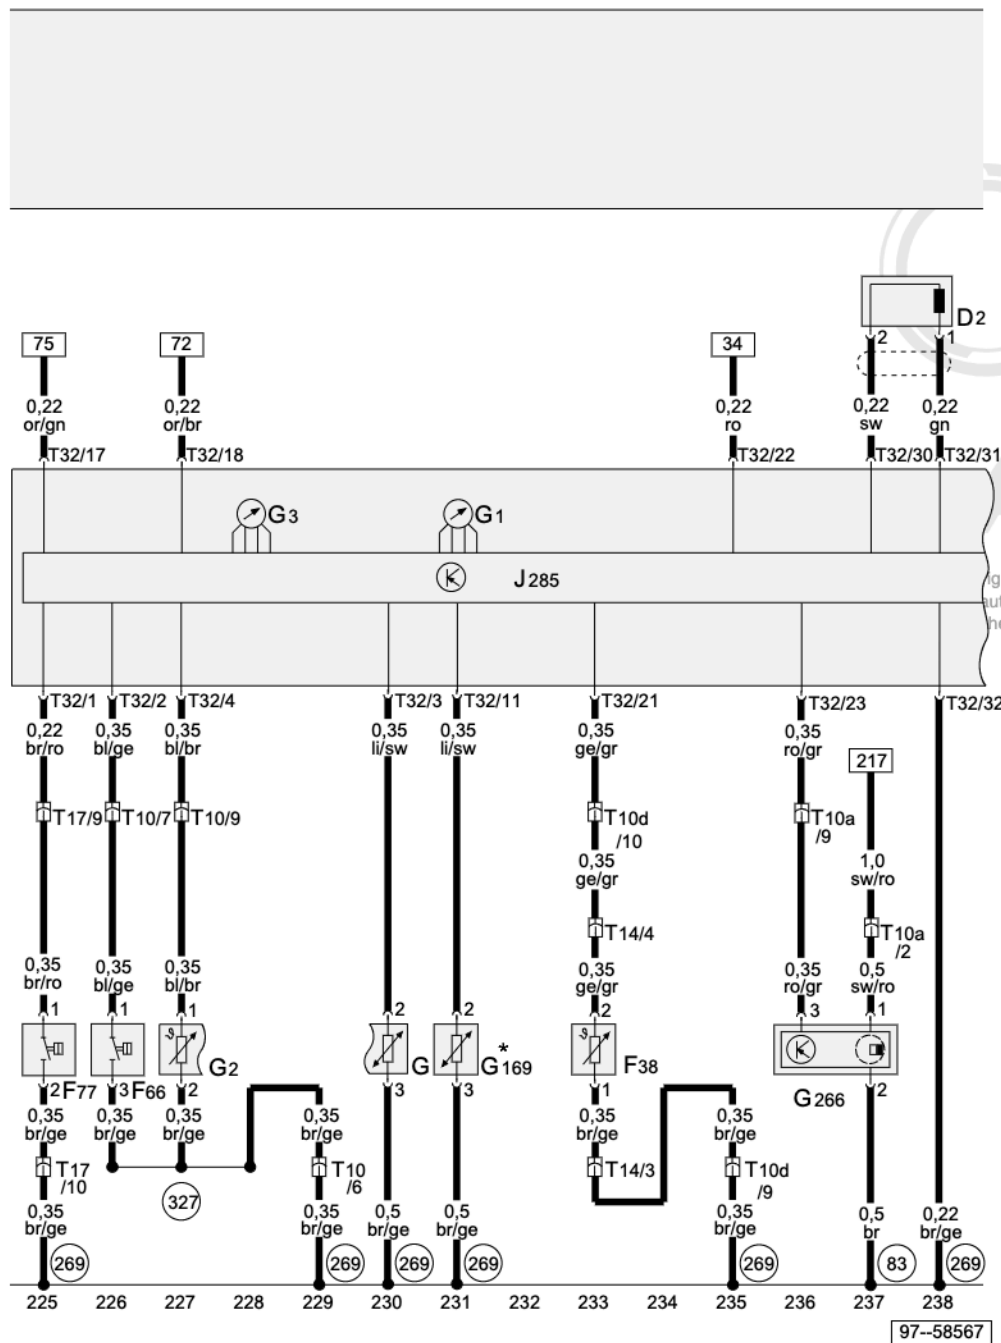


Control module with indicator unit in instrument panel insert,
Oil Pressure Switch, Brake Fluid Level Warning Switch

- C Generator (GEN)
- F1 Oil Pressure Switch
- F34 Brake Fluid Level Warning Switch
- G5 Tachometer
- J... Engine Control Module (ECM)
- J234 Airbag Control Module
- J285 Control module with indicator unit in instrument panel insert
- K2 Generator (GEN) Warning Light
- K75 Airbag Malfunction Indicator Lamp (MIL)
- T2 Double Connector, black, engine compartment, right
- T10 10-Pin Connector, black, connector station E-box, plenum chamber
- T10c 10-Pin Connector, violet, connector station A-pillar, left
- T17d 17-Pin Connector, red, connector station E-box, plenum chamber
- T32a 32-Pin Connector, green, on instrument panel insert

- 261 Ground connection, in wiring harness heated spray jet
- A17 Wire connection (61), in instrument panel wiring harness
- A121 Wire connection (High-bus), in instrument panel wiring harness
- A122 Wire connection (Low-bus), in instrument panel wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange
- rs = pink

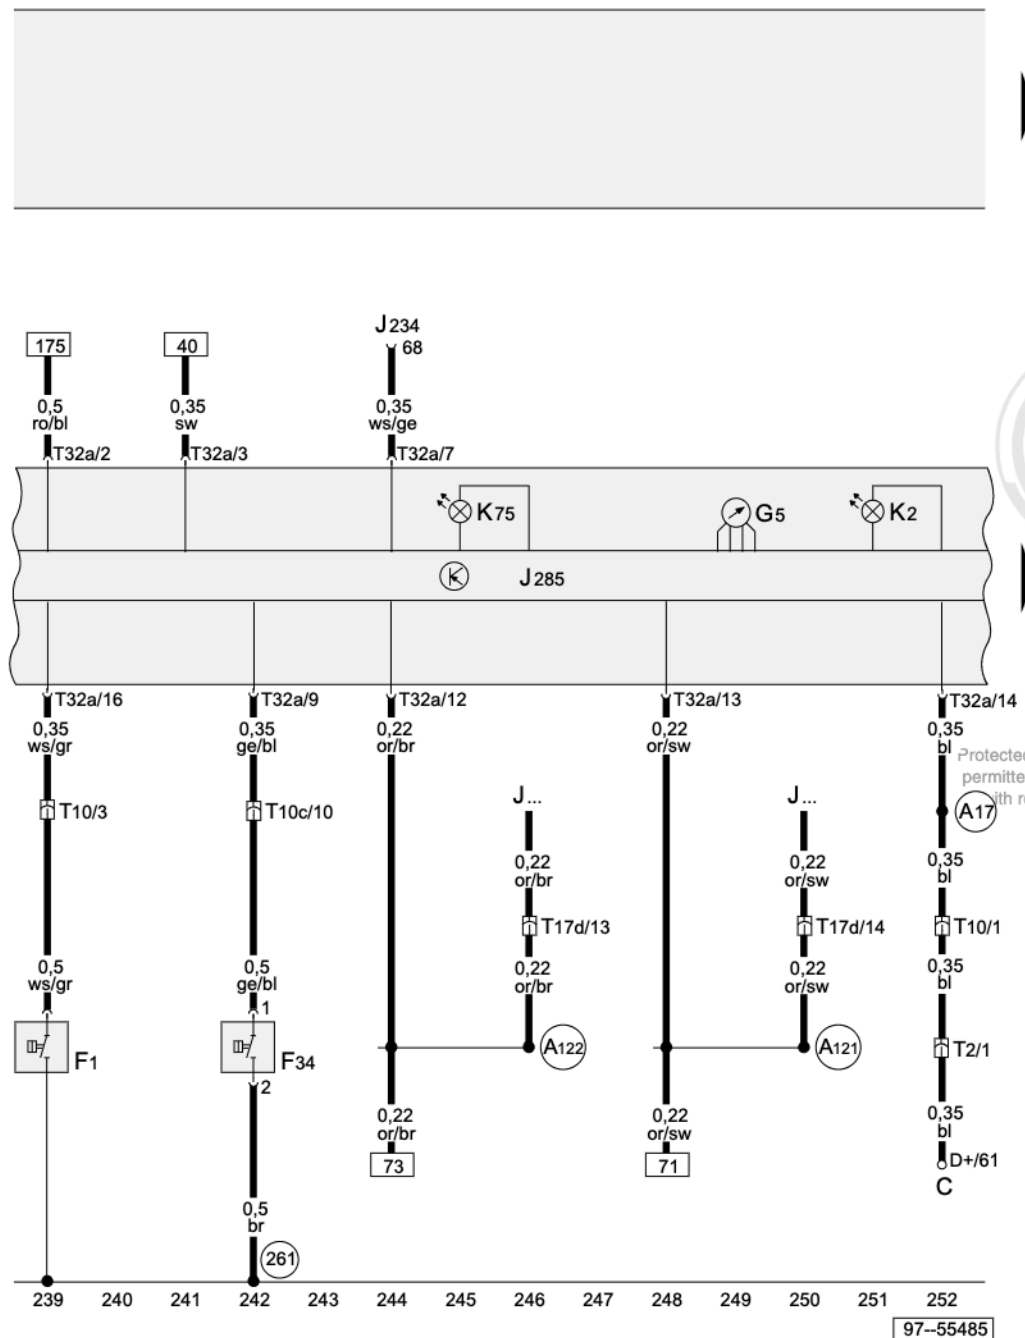



81 Ground connection -1-. In instrument panel wiring harness

(A175) Wire connection (58s), in instrument panel wiring harness

Control module with indicator unit in instrument panel insert,
Speedometer, diagnostic connection

- G21 Speedometer
- J104 ABS Control Module (w/EDL)
- J285 Control module with indicator unit in instrument panel insert
- L157 Illumination for center armrest
- T16 16-Pin Connector, black, diagnostic connection
- T17b 17-Pin Connector, green, connector station A-pillar, left
- T32a 32-Pin Connector, green, on instrument panel insert

135 Ground connection -2-, in instrument panel wiring harness


238 Ground connection -1-, in wiring harness interior

A27 Wire Connection (vehicle speed signal), in instrument panel wiring harness

A76 Wire connection (K-diagnosis wire), in instrument panel wiring harness

A175 Connection (58s) (in instrument panel wiring harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability for the correctness of information in this document. Copyright by AUDI AG.

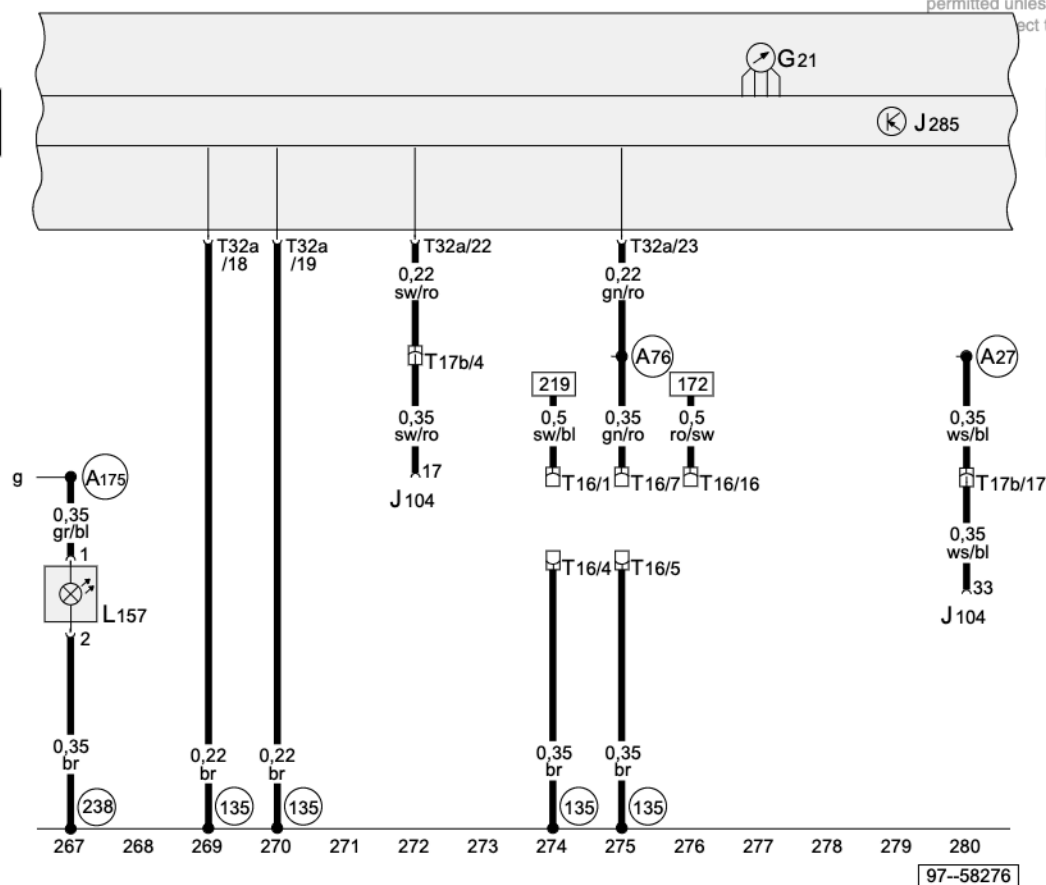

Control module with indicator unit in instrument panel insert,
Front Brake Pad Wear Sensors, Front Hood Switch

- F266 Front Hood Switch
- G34 Left Front Brake Pad Wear Sensor
- G35 Right Front Brake Pad Wear Sensor
- J285 Control module with indicator unit in instrument panel insert
- J393 Central control module for comfort system
- T4n 4-Pin Connector, black, in left front
- T4o 4-Pin Connector, black, in right front
- T5a 5-Pin Connector, black, front left
- T5b 5-Pin Connector, black, front right
- T10d 10-Pin Connector, grey, connector station A-pillar, left
- T14 14-Pin Connector, black, in engine compartment, left
- T17b 17-Pin Connector, green, connector station A-pillar, left
- T20g 20-Pin Connector, red, on central control module for comfort system (used to be Connector 4)
- T32 32-Pin Connector, blue, on instrument panel insert
- T32a 32-Pin Connector, green, on instrument panel insert

12 Ground connection, in engine compartment, left

179 Ground connection, in left headlight wiring harness

- * not for Audi S4
- ** Audi S4 only

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

